



## CORDLESS DRILL spare parts list

No.	Part Name	QTY	No.	Part Name	QTY
1	Sleeve bayonet lock 3*18.5	1	22	Gear housing	1
2	Sleeve	1	23	Motor Gear	1
3	O Ring 22*3	1	24	L/F button	1
4	Screw ST4*18	4	25	Bearing 625	2
5	Aluminum head shell 3016	1	26	Armature 3016	1
6	O Ring 18*3	1	27	Housing 3016	1
7	Needle bearing	1	28	Bracket 3013	1
8	Output shaft washer 1H	1	29	Epoxy washer 1H	2
9	Short tetragonal axis	1	30	Carbon brush 3013	2
10	Impact block	1	31	Rubber column	2
11	Steel ball $\varnothing$ 4	20	32	Rear cover 3016	1
12	Steel ball washer	1	33	Screw St3*14	6
13	Compression spring 3.2	1	34	3016 Right housing	1
14	Steel ball $\varnothing$ 5.5	2	35	Screw ST3*16	4
15	Annular gear	1	36	Switch 3006	1
16	Transmission shaft	1	37	Lock nut	1
17	Planet gear pin	3	38	3016 Left housing	1
18	Planet gear	3	39	Belt buckle wrench	1
19	Support Pin washer	1	40	Screw M4*10	1
20	Bearing 6902	1	41	Battery	1
21	Stainless steel washer 3016	1			