



J02-100C SPARE PARTS LIST

No.	Part Name	QTY	No.	Part Name	QTY
1	Outer Flange	1	27	Bearing clamp	1
2	Grinding wheel	1	28	Screw,M4X12	2
3	Inner Flange	1	29	Armature assembly	1
4	Wheel cover	1	30	Dust ring	1
5	Screw,M6X18	1	31	Bearing 607-2Z	1
6	Spindle	1	32	Bearing cap	1
7	Key 3x10	1	33	Wind baffle	1
8	Anti-dust cover	1	34	Screw ST3.9x75	2
9	Screw,M4X14	4	35	Stator Assembly	1
10	Spring washer,4	4	36	Motor housing	1
11	Flat washer,4	4	37	Cable clamp	2
12	Bearing box	1	38	Carbon brush holder	2
13	Bearing,6201-2RS	1	39	Screw, ST2.9x10	2
14	Internal circlip 32	1	40	Capacitor(0.22uf)	1
15	Big Gear	1	41	Screw, ST4.2x16F	2
16	External circlip12	1	42	Cable clamp	1
17	Bearing 696	1	43	Switch	1
18	Side handle	1	44	Switch button	1
19	Screw, ST4.2X22	4	45	Switch push-rod	1
20	Gear box	1	46	Push-rod spring	1
21	Lock button	1	47	Rear cover	1
22	Lock spring	1	48	Screw, ST4.2x14F	2
23	Steel ring 6	1	49	Screen broad	2
24	Hex.Nut M6	1	50	Cord guard	1
25	Small gear	1	51	Cable plug	1
26	Bearing 608	1	52	Spanner	1